

Distribution Cabinet Key Pad Functions: (master 5)

Service Menu Functions:

Prompt:	Function:	Allowed Entry:
VCR 12	Sets the number of VCR's operating.	4 to 255, ↓, ENT
Best ?	Best 25 channels	↓, ENT
Wrst ?	Worst 25 channels	↓, ENT
Chn# ?	Channel #'s' percent use	1 to 255, ↓, ENT
Clr% (1)	Clear current VCR percentages,	enter 1 to clear % use
ClrT B#?	Clear Time	1 to 80, ↓, ENT
Code ?	four digit code to get to the manager menus.	

Level 1 access:

Cd1	4	Displays number of times code 1 has been used. In this case shows the level 1 code has been used 4 times (hex).	↓
Chng Cd1		Change Code 1	0 to 9999, ↓, ENT
Time	70	sets time allotted per quarter, varying with booth occupancy. In this case shows the current time allotted per quarter is 70 seconds	↓, ENT
TMax	90	Sets allotted per quarter in-use when the Number of booths in-use is less than Bmid.	3 to 255
TMid	80	Sets allotted time per quarter in-use when the total booths in-use is equal to Bmid and less than Bmin.	3 to 255
TMin	70	Sets allotted time per quarter in-use when the total booths in-use is equal to or greater than Bmin.	3 to 255
BMid	4	sets number of booths required to be in use before TMid is used for the current time allotted per quarter.	1 to 80 and < BMin
BMin	7	sets number of booths required to be in use before TMin is used for the current time allotted per quarter.	1 to 80 and > BMid
Rtrn	?	Returns to Time prompt.	↓, ENT
Incntive		Enters the menu for entering incentives.	
\$	5+	1 sets the number of quarter to be added to the customers time if he puts in a 5 dollar bill.	0-4, ↓, ENT
\$	10+	3 sets the number of quarter to be added to the customers time if he puts in a 10 dollar bill.	0-8, ↓, ENT
\$	20+	8 sets the number of quarter to be added to the customers time if he puts in a 20 dollar bill.	0-16, ↓, ENT
\$	50+	20 sets the number of quarter to be added to the customers time if he puts in a 50 dollar bill.	0-40, ↓, ENT
\$	100+	50 sets the number of quarter to be added to the customers time if he puts in a 100 dollar bill.	0-80, ↓, ENT
Rtrn	?	Returns to Incntive prompt.	↓, ENT
\$Min	2	sets the min dollar input to start the booth In this case 2 dollars	1-100, ↓, ENT
Preview		Configures arcade booths as multifunction arcade/preview booths.	
6\$PerHr		Sets the dollar amount charged per hour.	
6\$MnStr		Sets the dollar amount required to start the movie	
P1Ch=63		Sets the VCR input channel that will be connected to preview booth 1.	
#OfBth	4	Total number of preview booths.	
P1=B1		Sets the preview booth number relationship to arcade booths. In this case preview booth 1 is assigned to arcade booth 1. It could just as easily been assigned arcade booth 6 or 7...	
Rtrn	?	Returns to Time prompt.	↓, ENT
Rtrn	?	Return to previous menu	↓, ENT

Level 2 access:

Cd2 65	Displays number of times code 2 has been used. In this case shows the level 2 code has been used 65 times (hex).	↓
Chng Cd2	Change Code 2	secret code 0 to 9999, ↓, ENT
B Cn B#?	Booth Coin intake	1 to 80, ↓, ENT
T Cn ?	Total Coin intake	↓, ENT
Answ 4	Sets number of rings the modem will wait before answering.	1 to 7 0 modem will not answer phone
Rcnf (1)	Reconfigures distribution cabinet booth number assignments to switch block settings on MUX boards.	1, ↓, ENT
Menu 1?	Jump to secure menu 1	↓, ENT
Rtrn ?	Return to previous menu	↓, ENT

Level 3 access:

Cd3 10	Displays number of times code 3 has been used. In this case shows the level 3 code has been used 10 times (hex).	↓
Chng Cd3	Change Code 3	secret code 0 to 9999, ↓, ENT
ClrC (1)	Clear Coin intake	enter '1' to clear coin intake. 1, ↓, ENT
CICn 23	Displays the number of times the coin count has been cleared. (in hex)	↓
Menu 1?	Jump to secure menu 1	↓, ENT
Menu 2?	Jump to secure menu 2	↓, ENT
Rtrn ?	Return to non secure service menu	↓, ENT