

TOUCH PAD CALIBRATION INSTRUCTIONS

- A. **Remote Board**- Black board located inside booth cabinet to the right of the TV.
- B. **DVD Touch pad**-Top gray ribbon cable connector on remote board.
- C. **Arcade Touch pad**- Bottom gray ribbon cable connector on remote board.
- D. **Each pad needs to be calibrated separately.**
 - 1. Locate blue button to left of gray ribbon cable on remote board.
 - 2. Locate power connector on top right corner of remote board.
 - 3. Remove power connector from board.
 - 4. Place left hand finger on blue button. With right hand plug-in power connector.
 - 5. When green led comes on, press and hold blue button for two seconds and release.
 - 6. Look at touch pad from front glass, if top row of lights are chasing each other across then continue to step 7 else go back to step 3.
 - 7. Close cabinet door.
 - 8. Individual functions will light up (vol up/down,quad,channel up/dwn selection etc.) one at a time .
 - 9. When function is lit up, lightly touch your finger to touch pad area.
 - 10. Continue touching each quadrant until finished.
 - 11. Touch pad will return to normal operation.
 - 12. Check response by touching each function
 - 13. REMEMBER-when touching panel in calibration mode- the lighter the touch the more responsive the area will be. NOTE- if you don't touch an area or touch too lightly, when calibration is finished those areas will not light up and WILL NOT FUNCTION. If this happens then go back to step 3.